



齿轮安装调整步骤 Gears installation & Adjustment

安装好后要求能顺畅转动，前后无虚位
After installation rotated smoothly without spaces.


1

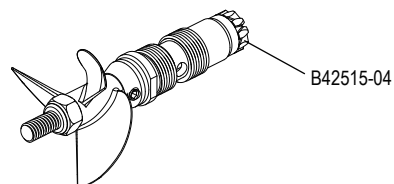

2

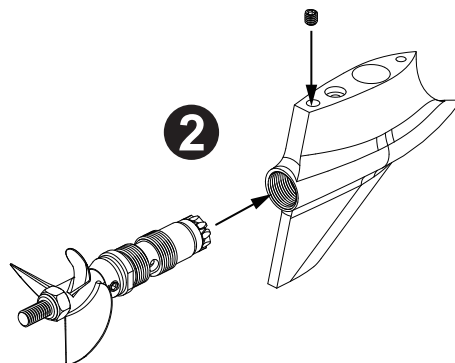


3

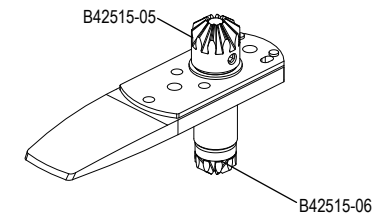

安装好后要求能顺畅转动，上下无虚位
After installation rotated smoothly without spaces.

4

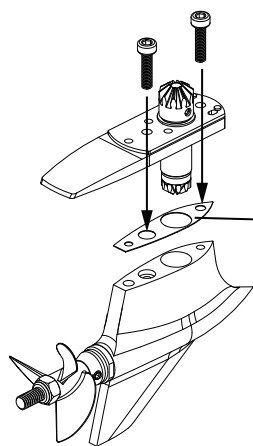

如果安装后齿轮转动不顺畅，
请增加垫片
After gears installation rotated un-smoothly,
add spacers.

5

调整前后位置，
使齿轮转动顺畅
Adjust to make gears
rotate smoothly

